

MOMENTUM SERIES



MOMENTUM 32



MOMENTUM 26

Welcome to Osprey. We pride ourselves on creating the most functional, durable and innovative carrying product for your adventures. Please refer to this owner's manual for information on product features, use, maintenance, customer service and warranty.

OWNER'S MANUAL



ospreypacks.com

OVERVIEW



FEATURES

- 1 Zippered heat-embossed top pocket
- 2 Separate top zip access to padded laptop and tablet sleeves
- 3 Main compartment with document sleeve and mesh pockets
- 4 Stretch side panel water bottle pockets
- 5 Front panel organization pocket
- 6 LidLock™ helmet attachment
- 7 Reflective detail on front panel
- 8 Large lower zippered shoe pocket (32L only)
- 9 Blinker light attachment
- 10 Built-in, snug-fitting high visibility raincover
- 11 Side compression straps
- 12 Zippered heat-embossed side panel pocket with retractable keychain

FABRIC

- MAIN** 400D x 200D Nylon Dobby
ACCENT 420HD Nylon Packcloth
BOTTOM 420HD Nylon Packcloth

OVERVIEW



MOMENTUM 32

SPECS	ONE SIZE
Cubic Inches	1953
Liters	32
Pounds	2.67
Kilograms	1.21
Inches	20h x 12w x 11d
Centimeters	50h x 30w x 29d



UNIQUE FEATURE

- 1 Large lower zippered shoe pocket

MOMENTUM 26

SPECS	ONE SIZE
Cubic Inches	1648
Liters	26
Pounds	2.38
Kilograms	1.08
Inches	20h x 12w x 11d
Centimeters	50h x 30w x 29d



SUSPENSION



SUSPENSION

1 AIRSCAPE™ BACKPANEL

- + Mesh-covered ridge foam for ventilation and comfort

2 SHOULDER HARNESS

- + Innovative ventilated stretch yoke and load lifters
- + Mesh-covered die-cut foam ventilation windows
- + Air mesh shoulder strap for comfort and ventilation
- + Adjustable sternum strap with safety whistle

3 WEBBING HIPBELT

- + Elastic hipbelt wing to maintain comfort while riding
- + Removable 25 mm webbing pack stabilizing hipbelt

SIZING / FIT



HARNESS FIT

The harness straps should wrap fully around your shoulders with no gaps between the pack and your back. The padded part of the harness straps should end 1¹/₂ cm - 2¹/₅ cm below the armpits and the sternum strap adjusted to approximately 2¹/₅ cm below the collarbone.

FEATURE DETAILS



LOWER SIDE COMPRESSION STRAPS 32L / 26L

Lower side compression straps stabilize loads and narrow the pack's profile when packing light. To compress the pack, cinch the side straps, and lift the slider buckle to loosen.




FRONT PANEL ORGANIZATION POCKET 32L / 26L

The front panel pocket secures and stores pens, books and other small items.



ZIPPERED HEAT-EMBOSSSED TOP POCKET 32L / 26L

The zippered heat-embossed top pocket provides a secure and scratch-free storage solution for sunglasses and other fragile items.

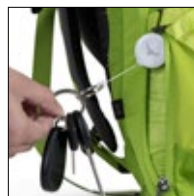

ZIPPERED HEAT-EMBOSSSED SIDE PANEL WITH RETRACTABLE KEYCHAIN 32L / 26L

Keep your keys, phone and other small items secure, scratch-free and easy to access while on the go. The retractable keychain prevents accidentally dropping keys.



STRETCH SIDE PANEL WATER BOTTLE POCKET 32L / 26L

The stretch side panel water bottle pocket holds smaller bottles and is intentionally angled to provide access to the pocket's contents without removing the pack.



LAPTOP AND TABLET SLEEVE

32L / 26L LAPTOP SLEEVE

Inches 18.9h x 11.8w x 3.9d
Centimeters 48h x 30w x 10d

32L / 26L TABLET SLEEVE

Inches 11.2h x 8.5w x 2d
Centimeters 28.5h x 21.5w x 5d

FEATURE DETAILS



LIDLOCK™ HELMET ATTACHMENT

32L / 26L

Osprey's LidLock™ easily and securely carries bicycle helmets.

- A Locate the LidLock™ helmet attachment clip near the top of the pack's front panel and pull away from the pack.
- B In the vertical position, pass LidLock™ through helmet vent from the bottom and engage in horizontal position.
- C Reverse process to detach helmet.



BLINKER LIGHT ATTACHMENT

32L / 26L

The blinker light attachment strap found near the base of the front panel of the pack allows for quick light attachment for high visibility in the dark.

- A Secure blinker light clip through reflective blinker light attachment loop
- B Blinker light attachment loop is reflective and provides added visibility when not using a blinker light



INTEGRATED REMOVABLE RAINCOVER

32L / 26L

- A Locate the raincover icon near the base of the pack.
- B Unzip the raincover compartment.
- C Pull raincover from compartment and slip over the top and bottom of the pack.
- D Tension into place using the cord lock at the bottom of the raincover.
- E Reverse this process to return raincover to compartment.
- F To remove the raincover altogether, unthread the plastic retainer bar from the cord loop inside the raincover compartment.

Tip: To prevent mildew, remove raincover and allow to dry entirely after use in the rain.

For more information on this product and others, pack care, how to pack your pack, our lifetime guarantee, or to contact Osprey Customer Service, visit **ospreypacks.com**.

OWNER'S MANUAL



ospreypacks.com